



Stainless Steel ICE MAKER

with water dispenser

Care and Use Guide

DURABLE

FEATURES:

- Unique design uses “watercooler” style five gallon water jug to conveniently supply ice or cold drinking water.*
- Choose from small, medium, or large cubes
 - Small or medium cubes great for drinks
 - Large cubes great for coolers
- Rugged stainless steel body ensures durability



*water bottle not included

For your safety and continued enjoyment of this product, always read the instruction book carefully before using.

IMPORTANT SAFEGUARDS

SAVE THESE INSTRUCTIONS


Read and understand all instructions before using the appliance.

- NEVER put the unit near a hot burner or in an oven.
- DO NOT use for any purpose other than intended use.
- ALWAYS place the unit on a firm and stable surface.
- Ensure that the unit is not placed close to the edge of the table, worktop, etc. where it can be pushed off or fall.
- NEVER use abrasive cleaning agents or abrasive cloths when cleaning the unit.
- ONLY use the unit when completely assembled.
- Before using for the first time, remove all packaging and thoroughly wash all parts with hot soapy water.
- All safety messages will tell you what the potential hazard is, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.

PREPARING FOR USE


- When using electrical appliances, basic safety precautions should be followed to reduce the risk of fire, electric shock, and injury to persons or property. Read all instructions before using any appliance.
- DO NOT operate this or any other appliance with a damaged cord.
- Connect to properly polarized outlets only. No other appliance should be plugged into the same outlet. Be sure that the plug is fully inserted into the receptacle.
- DO NOT run the power cord over carpeting or other heat insulators. Do not cover the cord.
- Keep cord away from traffic areas, and do not submerge in water.
- We DO NOT recommend the use of an extension cord, as it may overheat and become a risk of fire.
- Unplug the ice maker before cleaning.
- Exercise CAUTION and use reasonable supervision when appliance is used near children.
- DO NOT use your ice-maker outdoors. Place the ice-maker away from direct sunlight and make sure that there is at least 4 inches of space between the back of your unit and wall.
- Keep a minimum distance of 4 inches on each side of your unit free.
- DO NOT use other liquid to make the ice-cube other than water.
- DO NOT clean your ice maker with flammable fluids. The fumes can create a fire hazard or explosion.
- DO NOT tip over.
- If the ice maker is brought in from outside in wintertime, give it a few hours to warm up to room temperature before plugging it in.
- WARNING: This appliance must be grounded.
- To avoid a hazard due to instability of the appliance, it must be placed on an even or flat surface.

OVERVIEW OF COMPONENTS

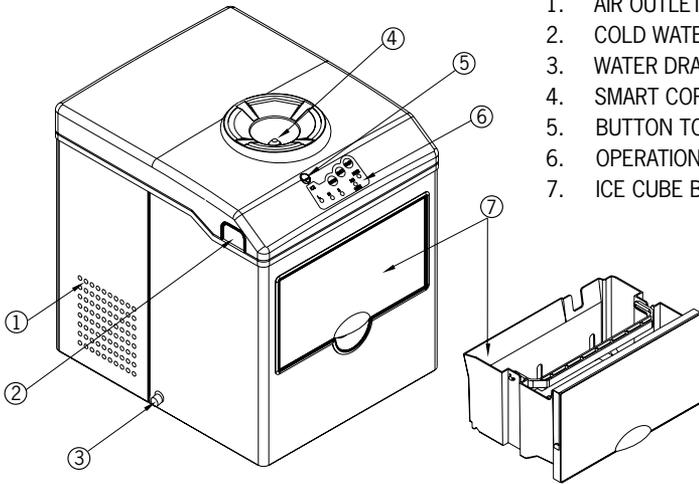

1. AIR OUTLET
2. COLD WATER FAUCET
3. WATER DRAIN CAP
4. SMART CORE FOR WATER BOTTLE
5. BUTTON TO POP UP WATER FAUCET
6. OPERATION PANEL
7. ICE CUBE BASKET (Can be pulled out)


OPERATION PANEL

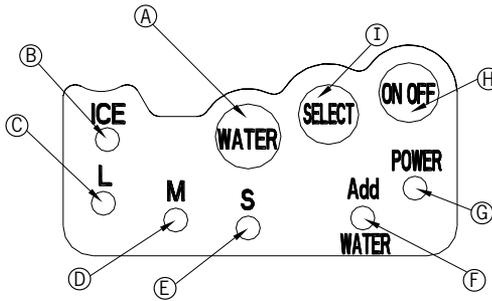

- | | |
|------------------------------|----------------------------------------------------------------|
| A. WATER DISPENSING BUTTON | F. WATER INDICATOR LIGHT (Means there is no water in unit.) |
| B. ICE FULL INDICATION LIGHT | G. POWER INDICATOR LIGHT |
| C. LARGE SIZE ICE CUBE | H. ON/OFF BUTTON |
| D. MEDIUM SIZE ICE CUBE | I. SELECT BUTTON (Use to select the desired size of ice cube.) |
| E. SMALL SIZE ICE CUBE | |

UNPACKING YOUR ICE MAKER

1. Remove the exterior and interior packaging. Check that an ice basket and ice scoop are included. If any parts are missing, please contact Chard® International customer service department at 888-815-4252.
2. Clean the interior with lukewarm water and a soft cloth. Take out the ice basket and clean it.
3. Find a location for your ice maker that is protected from direct sunlight and other sources of heat (i.e.: stove, furnace, radiator). Place the ice maker on a level surface. Make sure that there is at least 6 inches of space between the back and sides of your ice maker and the wall.
4. **IMPORTANT:** Allow one hour for the refrigerant fluid to settle before plugging ice maker in.
5. The appliance must be positioned so that the plug is accessible.
6. Before placing water bottle on the unit, be sure that the drain plug on the side is tightly fastened.
7. Hold the water bottle vertically and upside down (over the unit) and place the water bottle into the SMART CORE for the water bottle. Apply slight pressure in order to pierce the bottle cap with the spigot. This unit accepts two, three or five gallon water bottle with pierceable sealed caps.

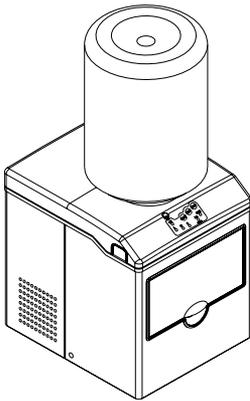

PLACE BOTTLE
VERTICALLY
STRAIGHT DOWN

CONNECTING YOUR ICE MAKER

DANGER

Improper use of the grounded plug can result in the risk of electrical shock. If the power cord is damaged please call our customer service at 888-815-4252.

1. This unit should be properly grounded for your safety. The power cord of this appliance is equipped with a three-prong plug which mates with standard three prong wall outlets to minimize the possibility of electric shock.
2. Plug your appliance into an exclusive, properly installed, grounded wall outlet. Do not under any circumstances, cut or remove the third (ground) prong from the power cord. Any questions concerning power and/or grounding should be directed toward a certified electrician.
3. This appliance requires a standard 110-120volt, 60Hz electrical outlet with three-prong ground.

CLEANING & MAINTENANCE

Before using your ice maker, it is strongly recommended to clean it thoroughly.


1. Take out the ice basket.
2. Clean the interior with diluted detergent, warm water and a soft cloth.
3. Then use the water to rinse the inside parts, and drain out the water by unplugging the drain cap on the side.
4. The outside of the ice maker should be cleaned regularly using a damp cloth, mild detergent solution and warm water.
5. Dry the interior and exterior with a soft cloth.
6. When the machine is not in use for a long time, open the water drain cap to drain water.

USING YOUR ICE MAKER

1. Press "ON/OFF" on the control panel to begin the ice making cycle.
2. Select the size of the ice cube by pressing the "Select" button.
3. The ice making cycle lasts 6 to 15 minutes, depending on the size of the ice cube selection and the ambient temperature.
4. If water pump can't inject water, the ice maker will stop automatically, and the "ADD WATER" indicator will be on on the operation panel. Please check the water bottle and replace a new bottle full of water.
5. Allow the refrigerant liquid inside the compressor at least 3 minutes to settle before restarting.
6. Press "ON/OFF" button again to start the unit again.
7. The ice maker automatically stops working when the ICE light on the operation panel is on means that ice basket is full.

Cold water can be enjoyed after the ice-making has been producing for more than 45 minutes.

- Press the button to pop up the cold water faucet.
- Press the "WATER" Water Dispensing Button on the operation button to dispense the cold water to your cup. Release the dispensing button when your cup is full of the cold water.

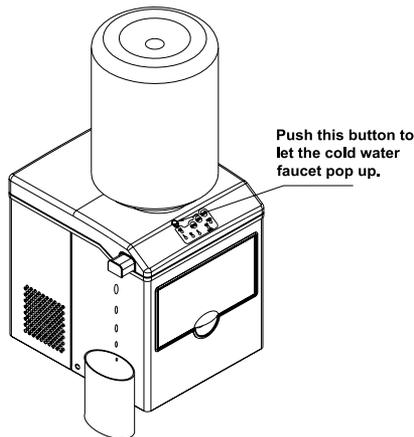

TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	SOLUTION
WATER indicator light is on.	Lack of Water.	Stop the ice maker. Replace with a new, full bottle of water. Then restart it.
ICE indicator is on.	The ice basket is full of the ice cubes.	Pull the ice basket and empty it.
Ice cubes stick together.	The ice cycle is too long.	Stop the ice maker, and restart it when the ice blocks melt. Select the small ice button.
	Water temperature in inner tank is too low.	Change the water in the inner tank. Temperature of water is better set between 45°F - 90°F.
Ice making cycle is normal but no ice is made.	Ambient temperature or water temperature in inner tank is too high.	Run the ice maker below 90° and pour colder water into tank.
	Refrigerant liquid leakage.	Verify by a qualified technician.
	Pipe in the cooling system is blocked.	Verify by a qualified technician.

NOTES



WARRANTY

Your product is warranted for one year from date of purchase against all defects in material and workmanship. Should your product prove defective within one year from date of purchase or receipt, return the unit, freight prepaid, along with an explanation of the claim. Please package your product carefully in its original box and packing material to avoid damage in transit. We are not responsible for any damage caused to the product in return shipment. Under this warranty, we undertake to repair or replace any parts found to be defective.

This warranty is only valid if the product is used solely for household purposes in accordance with the instructions. This warranty is invalid if the unit is dismantled or interfered with in any way or damaged through misuse.

We ask that you kindly fill in the details on your warranty card and return it within one week from date of purchase. Send warranty card to:

IM-15SS / CHARD STAINLESS STEEL ICE MAKER
C/O CI
PO Box 444
Two Rivers, WI 54241-0444

© 2016 Chard International, P.O. Box 444, Two Rivers, WI 54241-0444 1-888-815-4252